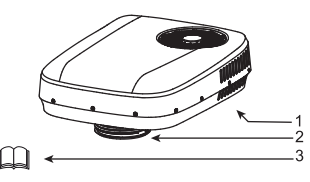
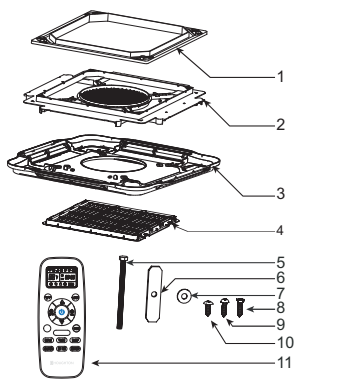


2 Packing List

| Outdoor unit                                                                     |                                         | Qty |
|----------------------------------------------------------------------------------|-----------------------------------------|-----|
|  | 1. BELAIRE air-conditioner outdoor unit | 1   |
|                                                                                  | 2. Air inlet duct                       | 1   |
|                                                                                  | 3. Manual                               | 1   |
| Indoor unit                                                                      |                                         | Qty |
|  | 1. Roof mount                           | 1   |
|                                                                                  | 2. Plenum mounting bracket              | 1   |
|                                                                                  | 3. Plenum assembly                      | 1   |
|                                                                                  | 4. Return air filter                    | 1   |
|                                                                                  | 5. M8 × 120 mm hex head bolt            | 4   |
|                                                                                  | 6. Metal clamping bar                   | 4   |
|                                                                                  | 7. Large M8 washer                      | 4   |
|                                                                                  | 8. Countersunk head self-tapping screw  | 10  |
|                                                                                  | 9. Plenum screw - ST4×19 pan head screw | 4   |
|                                                                                  | 10.Truss head tapping screw             | 4   |
|                                                                                  | 11.Remote control & bracket             | 1   |

3 Installation Guidance


Installation instructions

- Read this Manual thoroughly before installation and understand the guidance.
- Do not add other parts or restructure the product in the installation.
- Consult with HOUGHTON or the local distributor in the case of unusual applications or installation conditions that are not specifically covered by this manual.

Installation requirements


- The RV or caravan roof shall be able to support the air-conditioner's weight.
- Minimum thickness of roof is 25mm; maximum thickness of roof is 70mm.
- If the roof's thickness is greater than 70mm, you can purchase a "Thick roof kit " to suit your unit from HOUGHTON or the local distributor.

3.1 Installation position

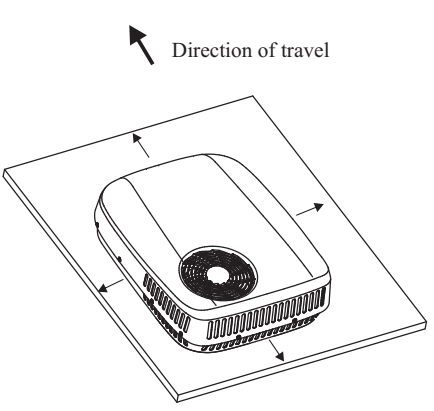

Before the installation, consider the installation position:

- The air-conditioner outdoor unit shall be installed in the center of the roof to ensure balanced air flow.
- The installation position of the outdoor unit shall be consistent with the traveling direction of the caravan.
- Before installing ensure that there is sufficient room for the plenum assembly to be installed.
- Consider the installation position and ensure that outlets are at least 400mm away from cupboards, walls&bulkheads that can redirect conditioned air back to the return air intake. If an outlet is closer than 400mm from an obstruction, then it should be sealed closed. Failure to do this will result in a unit that frequently cycles on and off.
- 360×360mm (400×400mm) cutting position shall avoid roof cladding joints where ever possible.
- There shall be a space of 100mm minimum all around the roof top unit to ensure suitable air flow and access for maintenance.

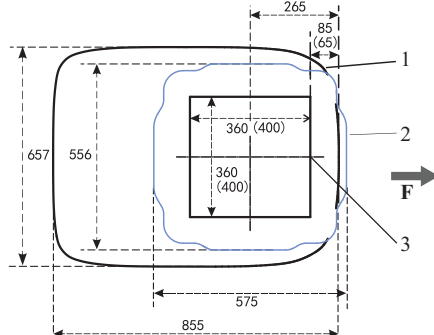


F = Direction of travel  
1. Position of the outdoor unit  
2. Position of the plenum  
3. Square hole

• The figure below shows the footprint of BELAIRE air-conditioner and the clearance required on the ceiling for the plenum installation.Measure from the reference position of the 360×360mm (400×400mm) square hole.Remember to add 100mm clearance around roof top unit perimeter.


**NOTE**

- Angle of inclination of the air-conditioner shall not be larger than 5° and the back part of the air-conditioner shall not be higher than the front part.
- For advice on installations outside of these limits please contact with HOUGHTON or the local distributor.


3.2 Load bearing of roof

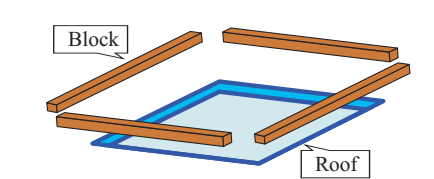

• The roof shall be able to bear the weight of the air-conditioner and shall be level without accumulating water. It is suggested that the caravan manufacturer confirms the suitability of the roof for load bearing.

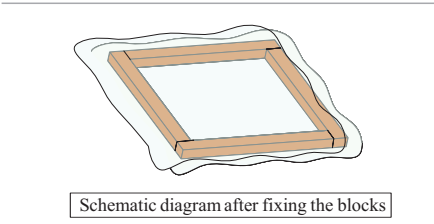


• If the installation hole is not preexisting then consult your caravan manufacturer for the most suitable way to cut the installation hole.

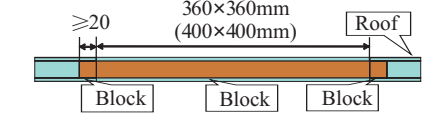

• The 360×360mm(400×400mm) hole shall be boarded up with wood sections that are at least 20mm thick. This boarding is to ensure that the roof will not crush from the installation bolts and that air conditioned air does not enter the ceiling space.


3.3 Power supply

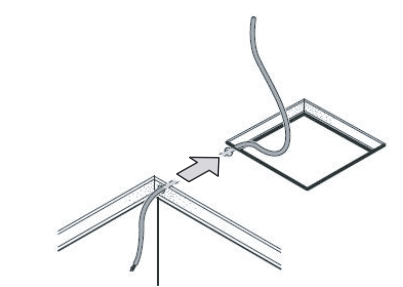

Electrical power supply cable

- Determine the route of the electrical supply cable from distribution board to air conditioning unit
- Fix the cable to prevent wear from road vibration
- Ensure air conditioner is on a dedicated RCD protected supply circuit that can be isolated.

3.4 Installation of roof mount

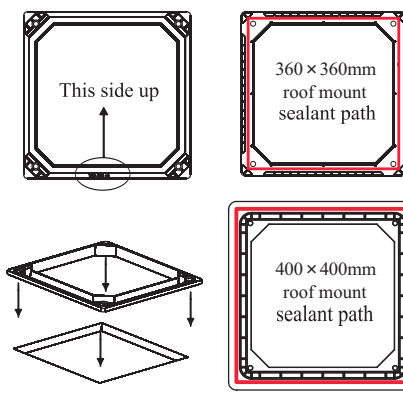


360 × 360mm roof mount sealant path  
400 × 400mm roof mount sealant path

- Make sure the roof is clean and dry and free from oil or grease.
- Confirm orientation by starting with the "this side up" logo upwards.
- Turn the part over and on the reverse side , apply the suitable RV Roof sealant uniformly over the path shown.
- Turn the part over again and make sure "This side up" is up. Press down firmly over the installation hole and remove any sealant that has squeezed out to form an effective seal.

**Important** - do not run sealant inside the mounting bolt holes.This will cause breaks in the seal.Always run the sealant around the outside of the bolt holes as shown.

3.5 Installation of outdoor unit

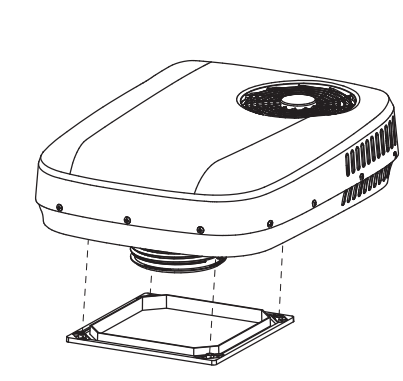


- Remove the outdoor unit from the carton and move it to the installation position on the roof.
- Put the outdoor unit over the previously installed roof mount. Adjust the position to make sure they mate and the four bolt holes on the corners align.

**NOTE**

- The outdoor unit is heavy. Always have a second person to help carrying the unit.
- Use the M8 bolts and check if the holes are aligned with the holes of the plenum mounting bracket.If not then use a long screw driver inserted up through the two holes to assist with alignment.

3.6 Connect the power supply and 485 communication

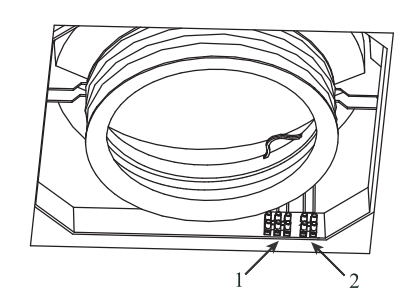


1. 3-Pole terminal block  
2. 485 communication terminal block

- **It is the installers responsibility to ensure that local wiring regulations are followed when connecting to mains supply.**
- Look upward from inside the caravan , and locate the terminal block as shown in the figure below.
- Connect the external power lines to the 3-Pole terminal block and note the positions of the active, neutral and ground.
- If centralised control is required, 485 communication cable shall be pre laid between the air-conditioner outdoor unit and the centralized control center. The yellow cable is connected to the "A" pole of the 485 communication terminal block, and the white cable is connected to the "B" pole of the 485 communication terminal block.

**NOTE**

- Any replacement of such supply cord is intended to be made by the manufacturer, its service agent or similar qualified person.

3.7 Installation of the plenum mounting bracket

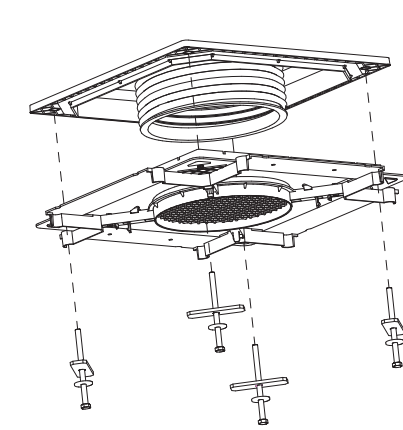


- Connect M8 bolts, washers and metal clamping bars in order shown.
- Lift the plenum mounting bracket toward the air conditioner.
- Insert M8 bolts, washers and metal clamping bars into the 4 corner holes of the plenum mounting bracket. Screw the bolts into their receiving threads by hand to ensure engagement.
- Ensure all bolts have started correctly for at least 2 or 3 rotations to avoid cross threading.
- Ensure the metal clamping bars align with the corresponding recess in the plenum mounting bracket as the bolts are tightened.
- Evenly tighten up all four bolts.

**NOTE**

- Tighten the bolts to 5-7 Nm torque. Do not exceed 7Nm(5.2 lbf ft).


3.8 Connection of air inlet duct

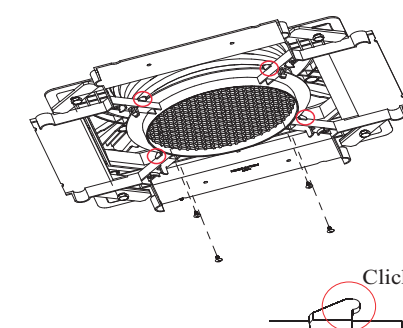


- Grasp the free end of the air inlet duct and pull it down until it touches the plenum mounting bracket.
- Continue to pull the rim of the duct down until it engages with the four latches on the plenum mounting bracket.
- The duct is correctly connected when you hear the four distinct clicking sounds of the latches and the rim of the duct is parallel to the surface of the bracket.
- If required, fix the rim with the plenum mounting bracket using 4 ST4×10 truss head tapping screws.




3.9 Installation of the plenum assembly

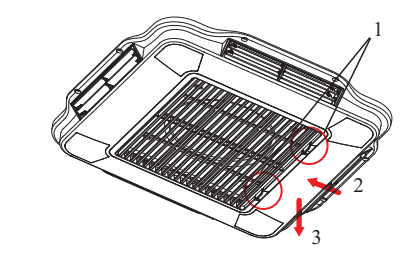


- Remove the air filter from the plenum by pushing both tabs inwards and then downwards.

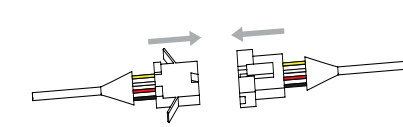


- Connect the socket and plug of the display panel and outdoor unit.
- Note that colors of the wires match: yellow to yellow, red to red, etc.

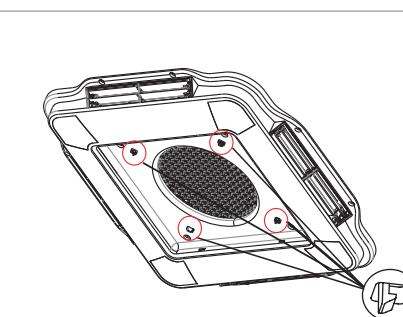

- Attach the plenum assembly to the plenum mounting bracket by engaging the two parts.

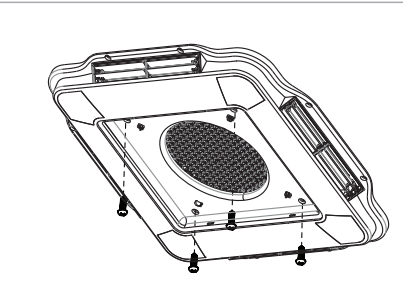

- Fix the plenum assembly on the plenum mounting bracket with four ST4×19 pan head screws.

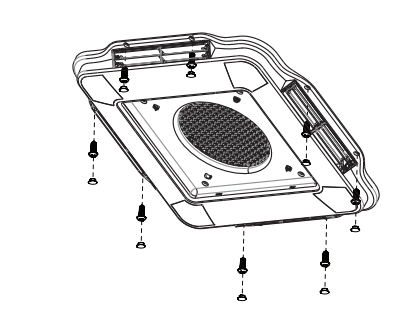


- Remove the screw caps from around the perimeter of the plenum.
- Fix the plenum to the ceiling using the 8 countersunk head screws.
- Replace the screw caps to the plenum.

**NOTE**

- This section is not compulsory but may be used- if required to pull the plenum up to the ceiling and remove any gaps.

3.10 Installation of the air filter

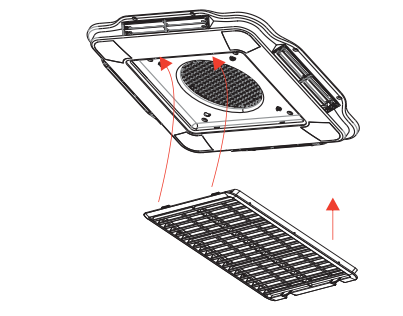


Install the air filter as shown:

- Insert the two large tabs on the filter in the corresponding slots.
- Move the filter upwards and make sure the tabs engage into the small slots on the opposite side.

**NOTE**


- Installation is complete.

3.11 Holder remote control

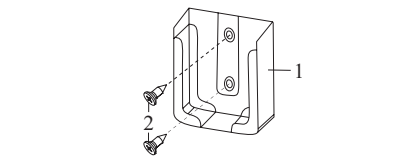

- Install the holder for the remote control in a convenient location,using 2 countersunk screws.

Adjust the louver

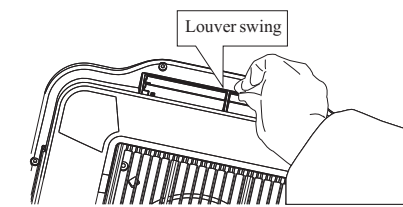

Louver swing

- Adjust direction and angle of louver by moving blade around its axis. The 2 blades move together. Louvers on opposite sides are symmetrical.

4 Quick Start Guide

- STEP 1

Switch on the power to the air-conditioner at the isolation breaker.

➤ STEP 2

Using the remote control, start the air-conditioner by pressing "❄" button and then select fan function by pressing the"MODE" button.
- STEP 3


Operate in low FAN, medium FAN and high FAN in turn to check normal operation.

➤ STEP 4

Select COOL or HEAT mode, adjust the set point temperature to three degrees lower/higher than the room temperature. The unit will start to blow cool/warm air after the compressor starts.

5 Remote control operation

Remote control

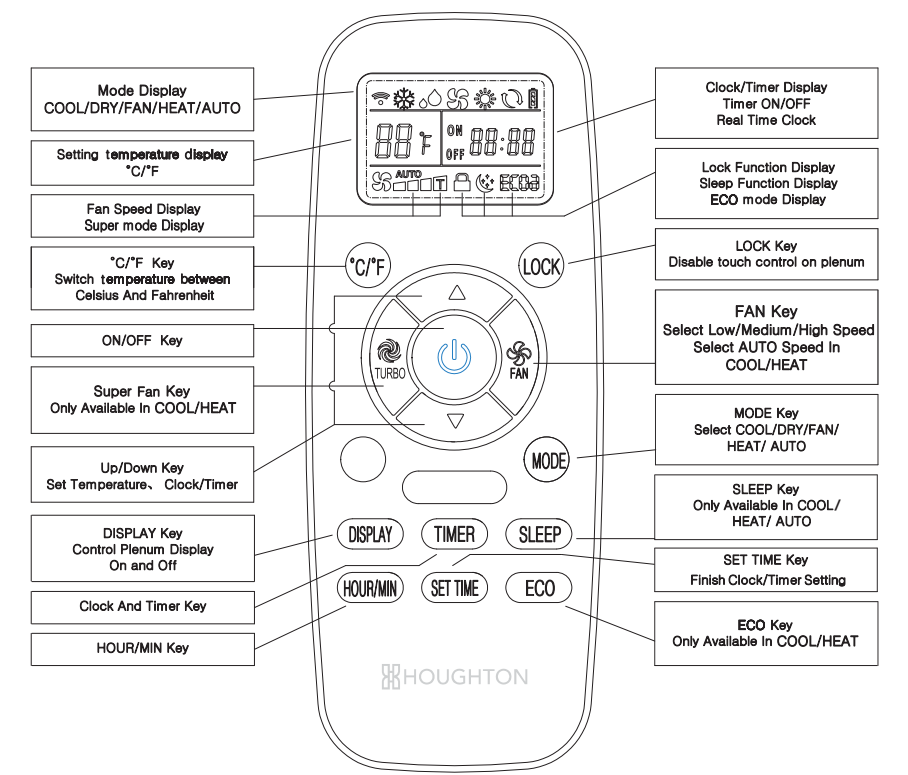

Mode Display  
COOL/DRY/FAN/HEAT/AUTO

Setting temperature display  
°C/°F

Fan Speed Display  
Super mode Display

°C/°F Key  
Switch temperature between Celsius And Fahrenheit

ON/OFF Key

Super Fan Key  
Only Available in COOL/HEAT

Up/Down Key  
Set Temperature, Clock/Timer

DISPLAY Key  
Control Plenum Display On and Off

Clock And Timer Key

HOUR/MIN Key

Clock/Timer Display  
Timer ON/OFF  
Real Time Clock

Lock Function Display  
Sleep Function Display  
ECO mode Display

LOCK Key  
Disable touch control on plenum

FAN Key  
Select Low/Medium/High Speed  
Select AUTO Speed in COOL/HEAT


MODE Key  
Select COOL/DRY/FAN/HEAT/ AUTO

SLEEP Key  
Only Available in COOL/HEAT/ AUTO

SET TIME Key  
Finish Clock/Timer Setting

ECO Key  
Only Available in COOL/HEAT

Plenum display

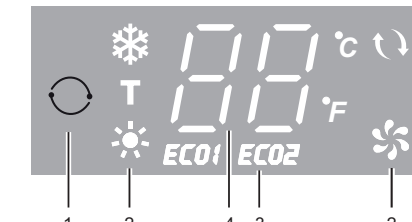


1. Touch screen key  
2. Mode display  
3. Economy mode display  
4. Temperature display  
(temperature range:16℃—30℃)

- You can control the basic functions of the air-conditioner with the touch screen key on the plenum display. This is useful if the remote control is lost or does not function.
- Press the touch screen key at the plenum. With each touch you cycle through the modes:  


- Cooling only air-conditioner skip heat mode.
- In case the plenum touch screen key is locked by the remote controller, operations of the key would be not available. Press the lock key on the remote controller again to unlock.

5.1 Switching the unit ON/OFF

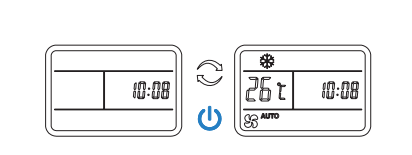


- Press the on/off "❄" key, the machine turns on, the buzzer of the plenum beeps once and the running mode and temperature will be displayed.
- Press the on/off "❄" key again, unit turns off and the plenum will display nothing.

5.2 FAN mode

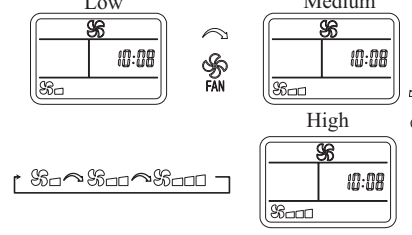


- Press the "MODE" key, select the "❄" mode.
- Press the "FAN" key to select between Low/Medium/High FAN.
- The plenum will display "❄" and the indoor room temperature.

5.3 COOL mode

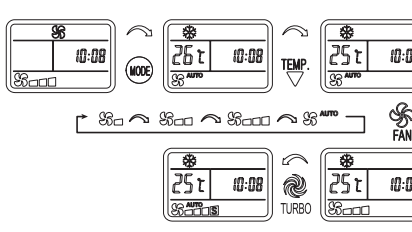


- Press the "MODE" key, select the "❄" mode.
- Press the down "▼" key to set a temperature lower than room temperature.
- Press the "FAN" key to select different speed fan.
- Press the "❄" key to select super speed.
- The plenum will display "❄" and the setting temperature.

5.4 DRY mode



- Press the "MODE" key, select the "💧" mode.
- Press the down "▼" key to set the temperature 1℃ lower than the room temperature and the plenum will display "💧" and the setting temperature.

5.5 HEAT mode

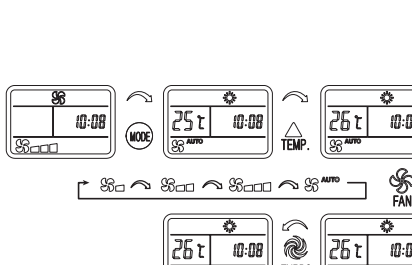


- Press the "MODE" key, select the "🔥" mode.
- Press the up "▲" key to increase the room temperature.
- Press the "FAN" key to select select different speed fan.
- Press the "🔥" key to select super speed.
- The plenum will display "🔥" and the setting temperature.

**NOTE**

- When operating in heating mode in low ambient temperatures the unit will periodically defrost the outside heat exchanger. The plenum will display"dF" during defrosting and then return to heating once the defrost is completed.




5.6 AUTO mode

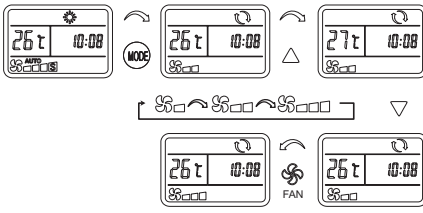

- Press the "MODE" key, select the "🌬️" mode.
- Press the up "▲" or down "▼" key to adjust the set temperature.
- Press the "FAN" key to select Low/Medium/High speed and the plenum will display "🌬️" and "❄️" or "🌬️" and "❄️" and the setting temperature.

5.7 ECONOMY mode

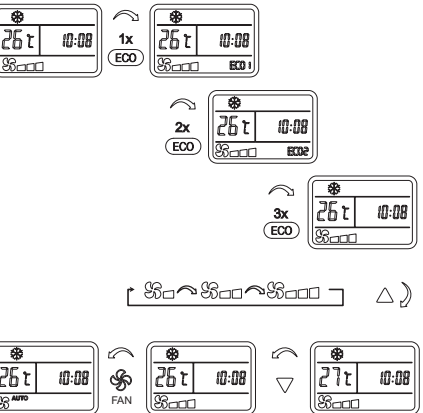


- In COOL or HEAT mode. Press the "ECO" key to select "ECO1" economy mode & "ECO2" economy mode & exit economy mode.
- Press the "ECO" key 1 time to select the "ECO1" mode - 70% capacity operation.
- Press the "ECO" key 2 times to select the "ECO2" mode - 40% capacity operation.
- Press the "ECO" key 3 times to exit the economy mode.
- Press the "FAN" key to select different speed.
- Press the up "▲" or down "▼" key to adjust the set temperature.

NOTE

- The ECONOMY mode can be entered only in the COOL/HEAT mode.

5.8 SLEEP mode

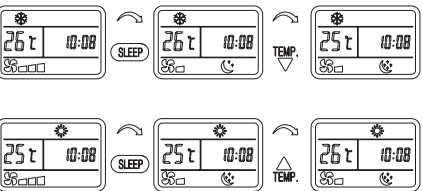

- In the COOL/HEAT mode, press the "SLEEP" key to enter the sleep mode.
- Press the up "▲" or down "▼" key to adjust the set temperature.
- Press the "SLEEP" key again to exit from sleep mode.

NOTE


- The sleep mode can be entered only in COOL / HEAT / AUTO mode. Fan speed default low speed can not be adjusted.

5.9 Celsius and Fahrenheit degree change




- In any mode, press the "°C/°F" key to select temperature between Celsius and Fahrenheit.

5.10 Setting the clock

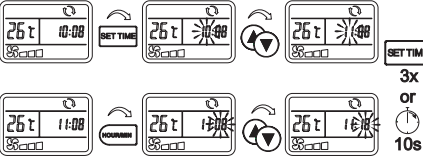

- Press the "SET TIME" key so that the hours digits are flashing.
- Press the up "▲" or down "▼" key to set the hour.
- Press the "HOUR/MIN" key so that the minute digits are flashing.
- Press the up "▲" or down "▼" key to set the minutes.
- To end the setting mode press the "SET TIME" key 3 times or wait 10 seconds until the digits stop flashing.

5.11 Setting the time

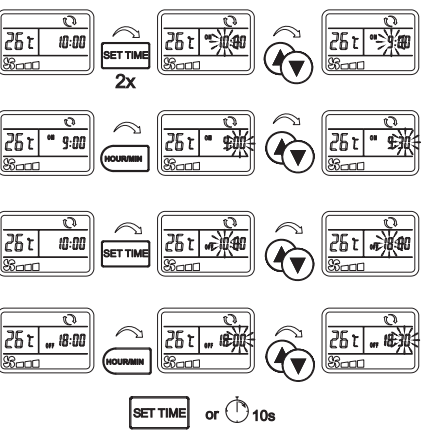


The timer can be set to start and stop the unit at a preprogrammed time.

- Press the "SET TIME" key twice until ON shows on the upper right side of the clock and the hour digits are flashing.
- Press the up "▲" or down "▼" key set the hour when the unit should switch ON.
- You may also set the minutes by pushing the "HOUR/MIN" key and using the "▲" or "▼" keys.
- Press the "SET TIME" key again until OFF shows on the lower right side of the clock and the hour digits are flashing.
- Press the up "▲" or down "▼" key to set the hour when the unit should switch OFF.
- You may also set the minutes by pushing the "HOUR/MIN" key and using the "▲" or "▼" keys.
- To end the setting mode press the "SET TIME" key again or wait 10 seconds until the digits stop flashing. The clock time is shown.

NOTE

- The timer ON and OFF times are now set but not yet activated.


5.12 Activating the timer

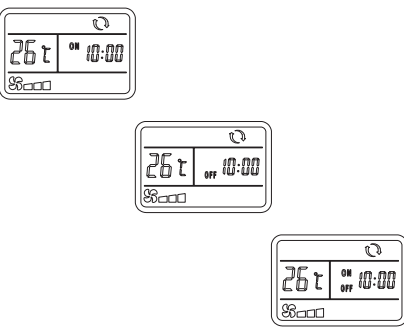

- Before activating the timer, select the operation mode, the set temperature and the desired fan level.After the start and stop times are set (see chapter 5.11) one of the three different TIMER modes can be activated:
  - TIMER ON mode:In this mode the unit will switch on at the desired ON time and keep on running.
  - TIMER OFF mode:In this mode the unit will stop running at the desired OFF time and will stay off.
  - TIMER ON/OFF mode:In this mode the unit will start to run at the ON time and stop running at the OFF time.
- Press the "TIMER" key repeatedly until either the ON or OFF or both symbols are flashing depending on which timer mode is preferred. To confirm the selection wait 10 seconds until the symbol stops flashing and lights up permanently-The clock time shows again.

## 6 Product Maintenance

- The return air filter is the only component that needs to be maintained.
- Check and clean the filters each week when in use to prevent the filters from being blocked by dirt & lint.
- The filters should be washed frequently to ensure effective cooling and heating.
- Pull out the filter from the plenum before washing in warm water with a touch of detergent.

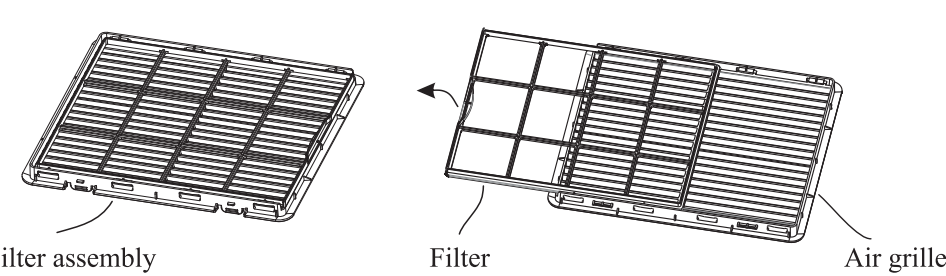

Replacement filter can be ordered separately.

**Bolt check**

- It is recommended that the bolts holding the unit to the roof are checked for tight- ness 3 months after the first installation of the product.
- These bolts should be regularly inspected every 12 months through-out the air-con-ditioners life.

**Maintenance**

- It is recommended that the air-con-ditioner is operated regularly to ensure good performance.
- In the case of a caravan that will not be used regularly then the unit should be operated for 20-30 minutes every 6 Months.

NOTE

Tighten to 5-7 Nm torque.  
Do not exceed 7Nm (5.2 lbf ft).

## 7 Specifications

| Model                  | H2800V        | Parameter               | H2800V       |
|------------------------|---------------|-------------------------|--------------|
| Power supply           | 230~240V/50Hz | Maximum current         | 5.8 A        |
| Cooling capacity       | 2800W         | Maximum design pressure | 4500 kPa     |
| Power input cooling    | 1100W         | Minimum design pressure | 3000 kPa     |
| Current cooling        | 4.8A          | Maximum air flow        | 480 m³/h     |
| Heating capacity       | 2600W         | Weight outdoor unit     | net 31.5 kg  |
| Power input heating    | 1100W         | Weight indoor unit      | net 3.4kg    |
| Current heating        | 4.8A          | Refrigerant charged     | R410A/610 g  |
| Maximum input power    | 1300W         |                         |              |
| Outdoor unit dimension | Height: 215mm | Width: 657mm            | Length:855mm |
| Indoor unit dimension  | Height: 49mm  | Width: 556mm            | Length:575mm |

NOTE

- All parameters listed are subject to change without notice and the specifications shown on the unit data plates shall prevail.
- E&OE All values are approximate & subject to change.
- Rated cooling test condition: indoor 27°C/19°C outdoor 35°C/24°C.
- Rated heating test condition: indoor 20°C/12°C outdoor 7°C/6°C.

## 8 Trouble Shooting Guide

| Symptom                                                        | Remedy                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No display when unit is turned ON.                             | <ul style="list-style-type: none"><li>Check that mains power is on and breaker to unit is on?</li><li>Check whether the remote battery is OK ?</li><li>Check plug between outside unit and plenum is engaged.</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Cooling not available.                                         | <ul style="list-style-type: none"><li>Check that the cooling mode is selected and the plenum display shows "❄️".</li><li>Use the remote control to set required temperature below the current room temperature.</li><li>The compressor will delay a re-start for three minutes.</li></ul>                                                                                                                                                                                                                                                                                                                                                           |
| Heating not available.                                         | <ul style="list-style-type: none"><li>Check that the heating mode is selected and the plenum display shows "🔥".</li><li>Use the remote control to set required temperature above the current room temperature.</li><li>More time would be needed for starting heating under extremely cold condition.</li><li>When the unit is in heating mode and the outside temperature is very low the unit may automatically enter defrost mode. The heating will temporarily stop as the unit warms the outside coil to remove any frost ice. Heating will resume once the outside coil has been cleared. During defrost the unit will display"dF".</li></ul> |
| Poor cooling capacity.                                         | <ul style="list-style-type: none"><li>Check the filter is clean.</li><li>Turn on the fan to high FAN to obtain the maximum capacity.</li><li>To make sure the air duct is installed in place.</li><li>To make sure all the doors and windows, as well as the sunroof are closed.</li><li>Curtains and awnings can be used to decrease the heating load.</li></ul>                                                                                                                                                                                                                                                                                   |
| Multiple air-conditioners fail to realize centralised control. | <ul style="list-style-type: none"><li>Ensure that each air-conditioner operates normally separately.</li><li>Ensure 485 communication lines of multiple air conditioners are connected with each other.</li><li>Ensure that each air-conditioner is equipped with a unique address.</li></ul>                                                                                                                                                                                                                                                                                                                                                       |

| Fault codes displayed on the panel |                                                   |
|------------------------------------|---------------------------------------------------|
| E0                                 | Motherboard and display board communication fault |
| E1                                 | Room temperature sensor fault                     |
| E2                                 | Indoor coil temperature sensor fault              |
| E3                                 | Outdoor coil temperature sensor fault             |
| E4                                 | Poor performance                                  |
| A1                                 | Outdoor ambient temperature sensor fault          |
| LC                                 | Motherboard and drive board communication fault   |
| A4                                 | Compressor discharge temperature sensor fault     |
| C4                                 | Compressor discharge over-temperature protection  |
| E5                                 | Outdoor coil over-temperature protection          |
| b1                                 | Module protection                                 |
| b2                                 | Module hardware protection                        |
| b3                                 | Module software protection                        |
| b5                                 | Compressor over-current protection                |
| b6                                 | Overvoltage and undervoltage protection           |
| b9                                 | Module heat sink temperature shutdown protection  |
| bA                                 | Compressor stall protection                       |


NOTE

Before contacting Houghton for technical support please collect the following information.

- Are any error codes displayed?
- Is the display panel in normal operation or not? Does it display a temperature from 16 to 30°C ?
- Can you adjust the setting temperature when in cool or heat mode?
- Is there a "0" shown in the display?
- Is the display showing a jumbled display?
- When in fan mode is there any air flow from the plenum outlets?
- Can you hear the compressor starting or stopping in heating or cooling mode?

Your help in collecting this information will greatly assist the Houghton service team in correcting any problems-Thank you.

## 9 Circuit Diagram

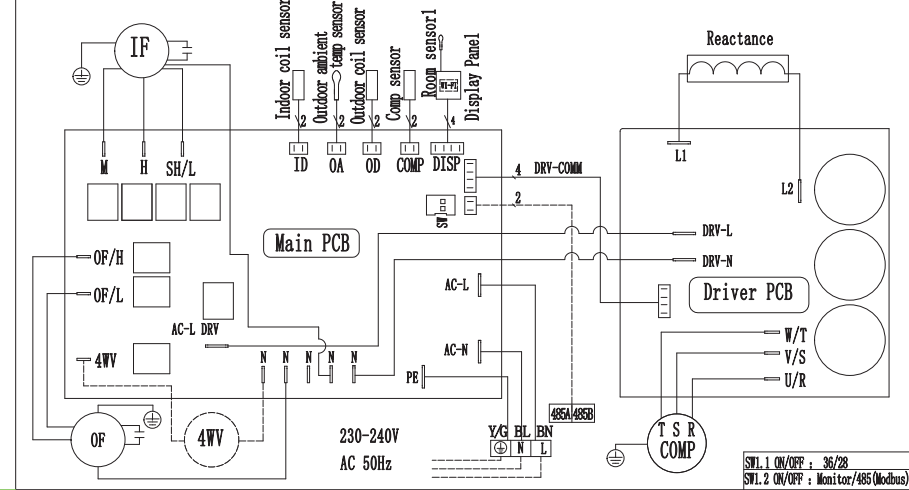

## 10 Disposal

Dispose of packaging material as required by standing regulations, separating them for recycling.

- The system contains Synthetic Greenhouse Gasses and cannot be disposed off as regular waste.
- Dispose the system according the local applicable rules and regulations. Obtain information about disposal at the city council, the responsible waste station and/or your local sales partner.



MODEL NUMBER: \_\_\_\_\_

SERIAL NUMBER: \_\_\_\_\_

DATE PURCHASED: \_\_\_\_\_

## OWNERS MANUAL

### CARAVAN INVERTER AIR-CONDITIONER

## BELAIRE

### MODEL

## H2800V





For your safety,please read this manual carefully before using the product.

7518-2000-01-V2

## 1 Safety

|                                                                                       | Explanation                                                                                                                                                                       |
|---------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | All the contents with this "Warning" logo are about the safety of the product and the user. The user shall operate in strict compliance with the instructions.                    |
|  | All the contents with this "Prohibition" logo are about the actions that shall be prohibited, or else the machine may be damaged or the user's personal safety may be endangered. |

- Make sure the external electric supply socket of the air-conditioner is effectively grounded in accordance with your local regulations.
- Failure to ground the unit correctly may cause electric shock or fire.
- If you are not to use the air-conditioner for a long time, please isolate the power supply.
- Clean the filter of the air-conditioner regularly. A dirty filter will decrease air flow and lead to poor cooling performance.
- Use the remote control to operate the air-conditioner.
- Install the air-conditioner in compliance with the instructions of this manual.
- Incorrect installation methods or alteration of the product may cause damage to the product or personal injuries to the user.
- Be careful when installing the unit on the roof of the caravan, crawl boards may be required.
- There may be wires between the roof and the ceiling. When cutting into the roof, make sure the power is isolated prevent risk of electric shock.
- Installation and maintenance of the air-conditioner must only be performed by personnel with appropriate trade qualifications and holding current licenses for such work.
- Do not over-tighten the power connection terminals.
- Ensure that your electrical supply and wiring is correctly sized for the power demand of the air- conditioner.
- This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. Children are not to play with this appliance and should be supervised at all times.
- It may not be operated in vehicles while driving.
- 485 communication cable shall be arranged separately from the power supply cable in the vehicle.

- Keep the air inlet and outlet of the inside and outside units of the air-conditioner clear.
- Do not spray any paint or insecticide on the surface of the air-conditioner .
- Immediately turn off the air-conditioner and isolate power supply if there is any unusual odour, smoke or fire detected. Contact after-sales service personnel in case of unit fault and fire.