



MOSCA MURPHY BED
OEM INSTALLATION MANUAL

TABLE OF CONTENTS

Introduction	2
Safety	2
Resources Required	3
Prior To Installation	3
Installation	4
Optional Installation	5
Operation	6
Notes	7

Introduction

The Mosca Murphy Bed is a cantilever bed system, with manual movement assisted by gas struts. The bed's load capacity is 220 lbs.

For information on the assembly or individual components of this product, please visit:

<https://support.lci1.com/beds/>

NOTE: Images used in this document are for reference only when assembling, installing and/or operating this product. Actual appearance of provided and/or purchased parts and assemblies may differ.

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels.

This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage, including voiding of the Lippert limited warranty.

WARNING

The "WARNING" symbol above is a sign that a procedure has a safety risk involved and may cause death or serious personal injury if not performed safely and within the parameters set forth in this manual.

WARNING

Failure to follow instructions provided in this manual may result in death, serious personal injury and/or severe product and property damage, including voiding of the component warranty.

CAUTION

The "CAUTION" symbol above is a sign that a safety risk is involved and may cause personal injury and/or product or property damage if not safely adhered to and within the parameters set forth in this manual.


Resources Required

- #10 x 1 1/4" self-tapping screws
- Electric or cordless drill or screw gun
- OEM best practice for holding bed in position for attachment, such as a jig

Prior To Installation

1. Ensure walls where the bed will be mounted have the minimum backer required for installation: 0.90 aluminum stuffed with wood (Fig. 1A).
2. Ensure there is adequate space for the bed, which is 6' 8" wide (Fig. 1). In the open position, the width of the bed measures 30 9/16" from the wall. When the bed is closed, it is 7 1/8" from the wall to the edge of the hinges.
3. **Optional:** Install structural side supports that are perpendicular to the main wall, are of adequate width to accommodate the attachment brackets, and have the minimum backer required for installation: 0.90" aluminum stuffed with wood.

Fig. 1

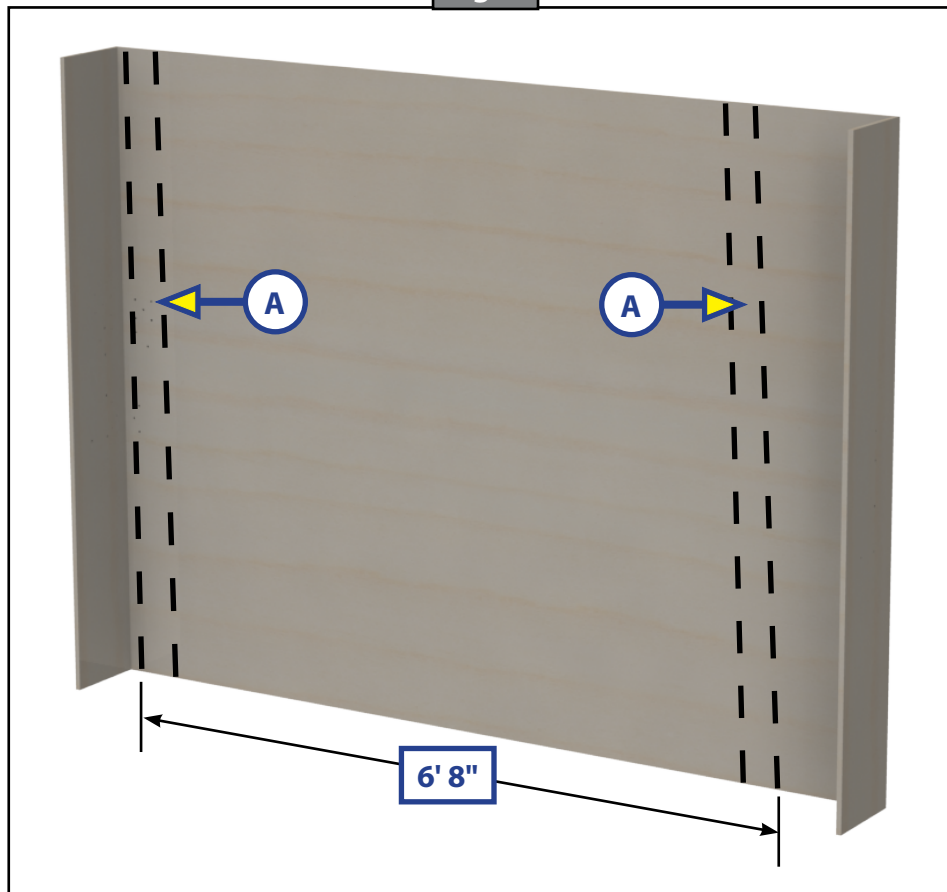

Installation


1. Place the Mosca Murphy Bed in the open position with the attachment brackets against the wall (Fig. 2).

NOTE: Use OEM best practice for holding bed in place during attachment, such as a jig.

NOTE: Make sure there is adequate backer and space where the bed will be attached.

2. Install 10 #10 x 1 1/4" self-tapping screws in the brackets against the wall on each side of the bed (Fig. 2).

Fig. 2

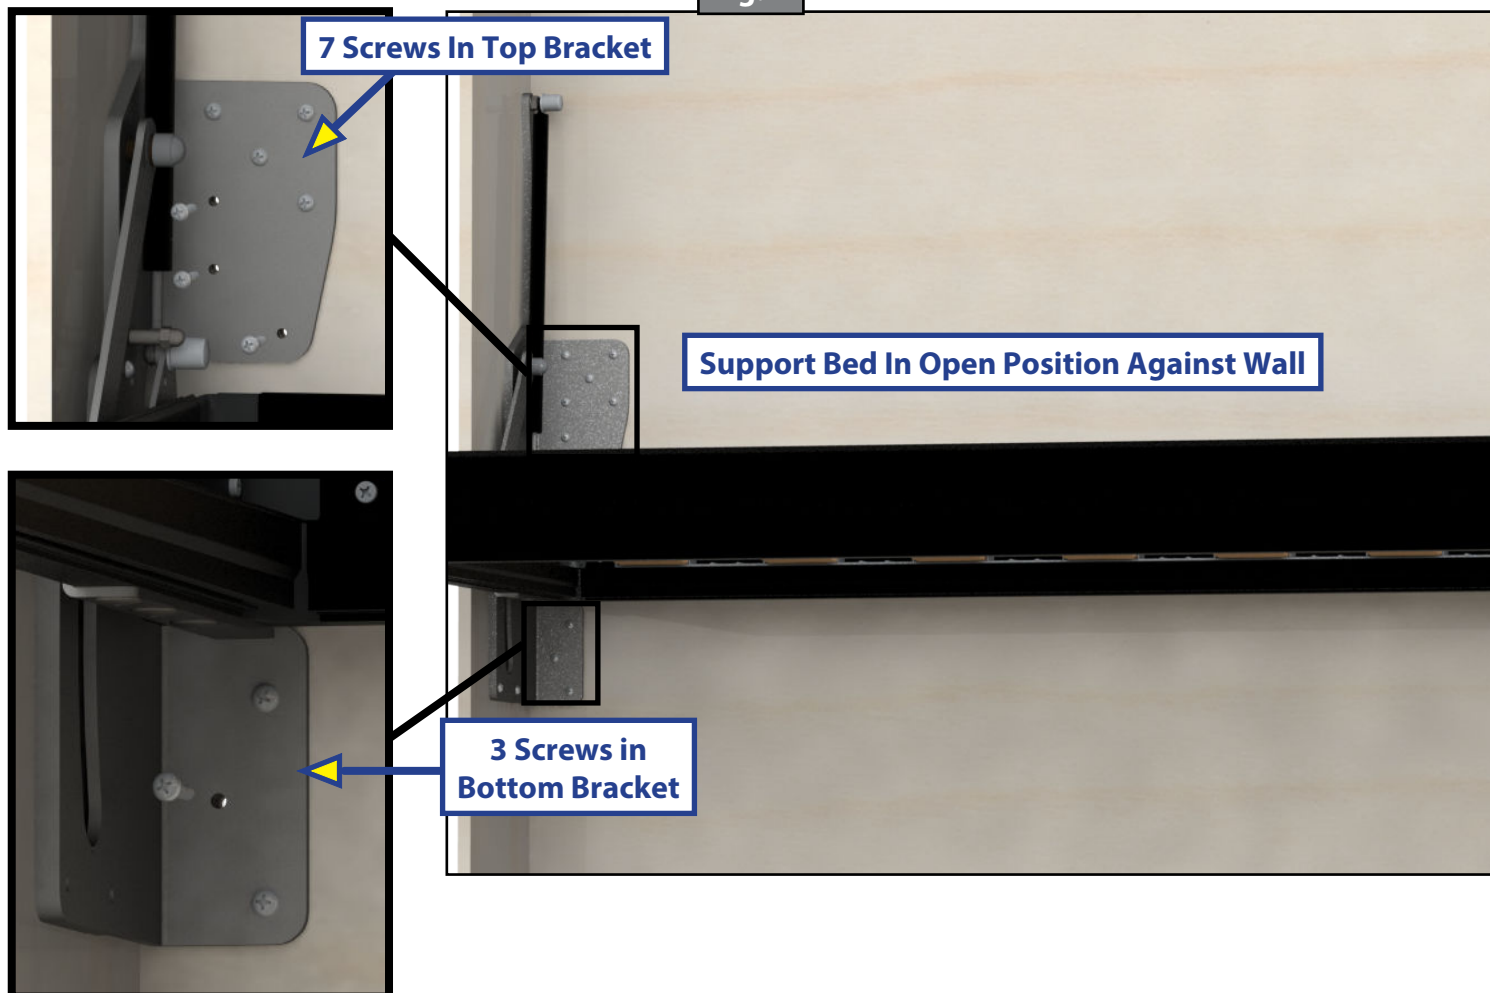

Optional Installation

1. After securing the bed to the wall, Install two screws into the sides of the brackets on both the top (Fig. 3) and the bottom (Fig. 4).
2. Push up the bed into the closed storage position.
3. Install a final screw on each side of the side brackets — located in the middle of the bracket — by entering through the slats to gain access to the screw hole (Fig. 5).

Fig. 3

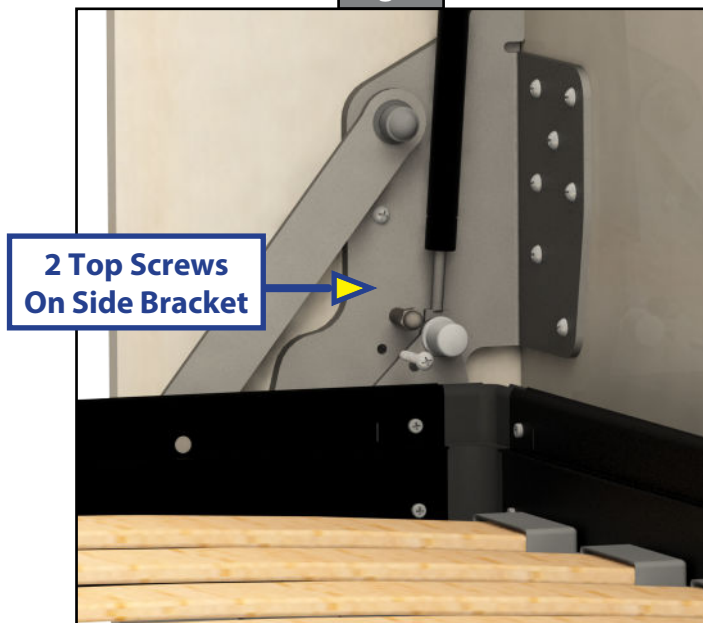


Fig. 4



Fig. 5



Operation

1. Pull down on the Mosca Murphy Bed to place it in the open position and ready for use (Figs. 6 and 7).
2. Push the bed up to place it in the storage position (Figs. 8 and 9) and ready for travel.

Fig. 6



Fig. 7



Open Position

Fig. 8

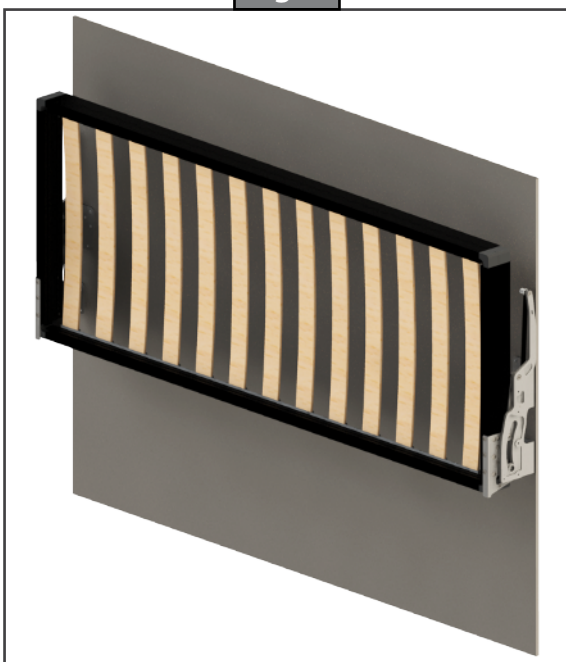


Fig. 9



Storage Position

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert
Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com